



Robbie R Launching and Hoisting Procedure

Using the winch

- The winch is powerful machine and its use must be taken seriously
- The key is attached to the Robbie R keys.
- Insert the key into the power switch but don't turn the key.
- Turn the power switch on
- Make sure no one is near or touching the lifting wires
- Press the up, down or stop button as required
- While the winch is in motion the operator must always be:
 - standing next to the control panel and within easy reach of the buttons
 - facing the boat and davits and continually observing the operation

Launching

Put the bungs in the boat or it will sink. There are 4 bungs – 2 internal and 2 external. The external bungs should be put in and removed when Robbie R is out of the water.

When the boat is afloat don't let too much wire off the drum or it will bunch up.

Hoisting

Don't hoist the boat too high or the wire will be damaged as the blocks in the tackle jam.

Take the bungs out of the boat (4 bungs) or it will fill with rain water and become too heavy for the davits